



124300

Illustrated Parts List

Model Series

124300

TYPE NUMBERS
0033 through 0178.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing	6
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Exhaust System	5
Flywheel	6
Fuel Supply	4
Governor Spring	5
Gear Reduction	6
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valve	3
Lubrication	2
Piston Group	2
Rewind Starter	6

BRIGGS & STRATTON
















PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.





1019 LABEL KIT










1058 OWNER'S MANUAL


1330 REPAIR MANUAL

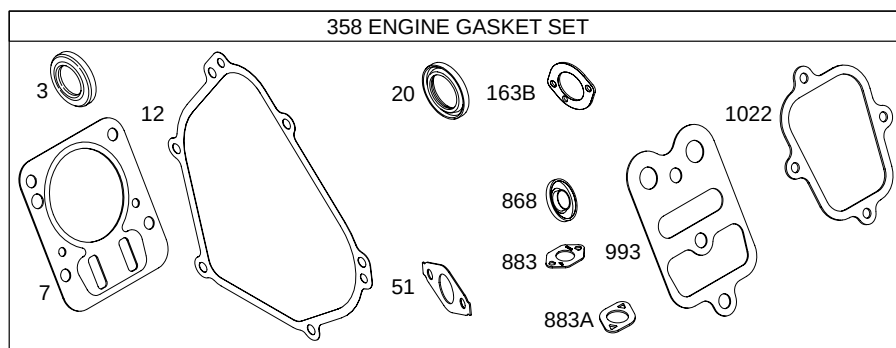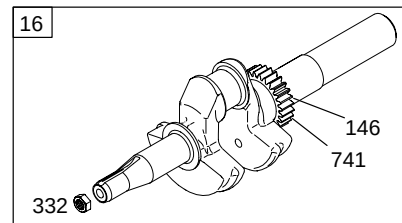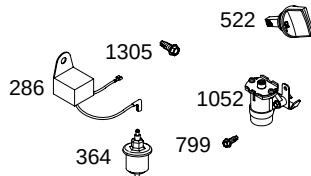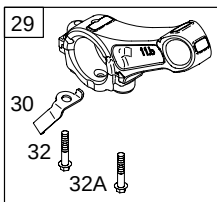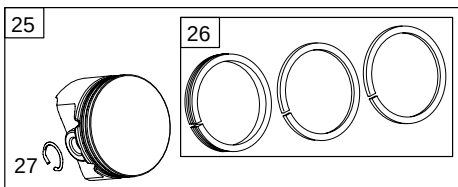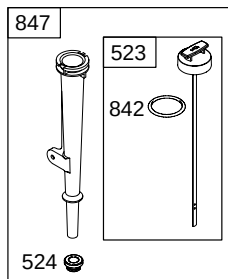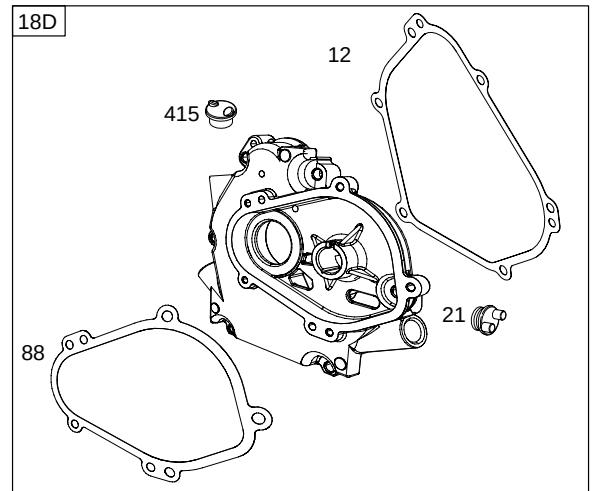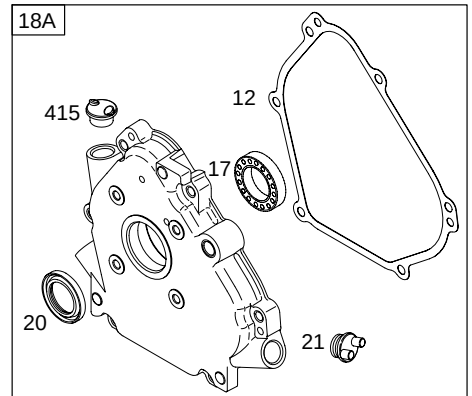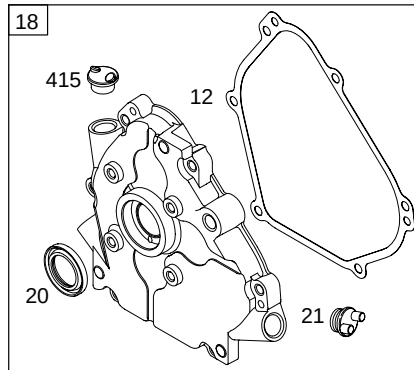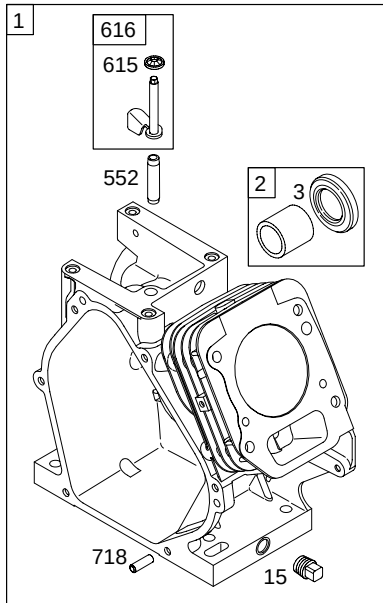





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5732-2 Assemblies include all parts shown in frames. 08/17/2005

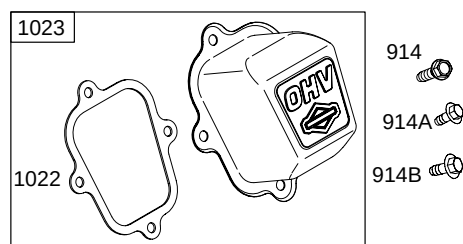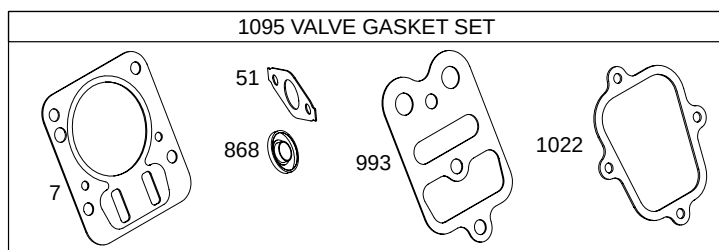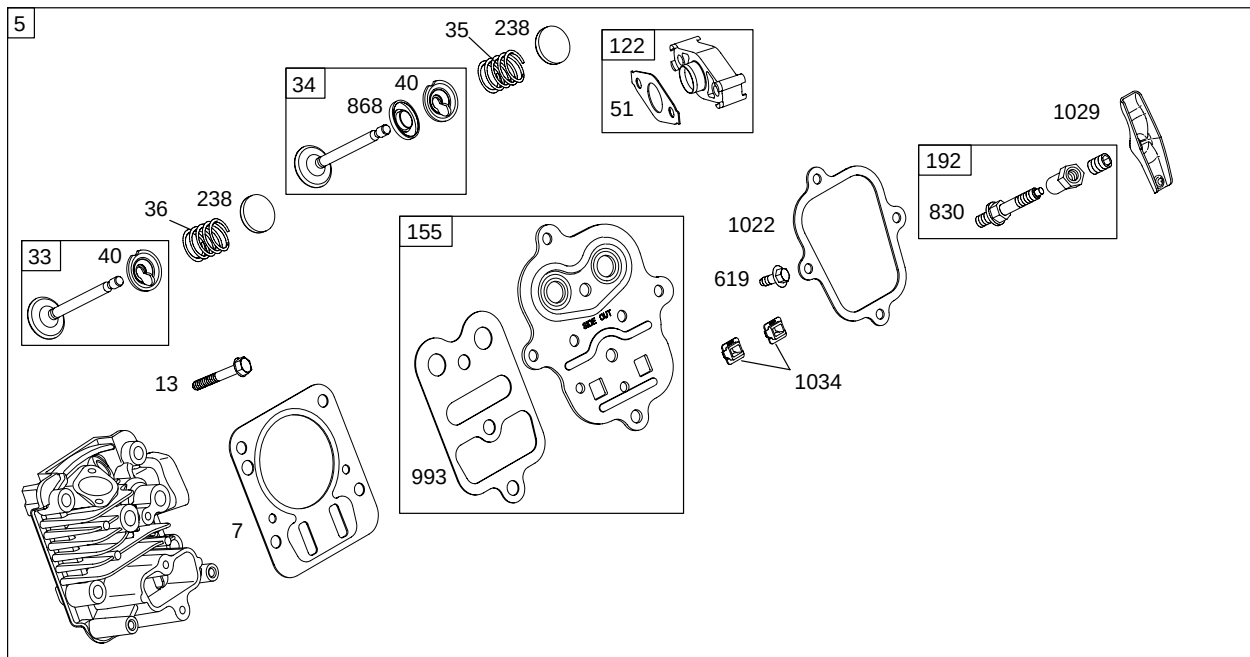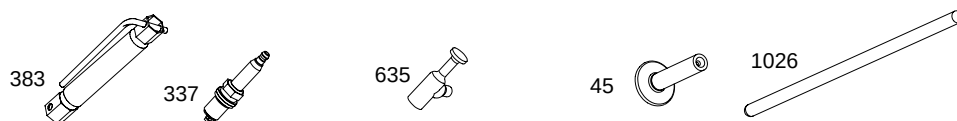

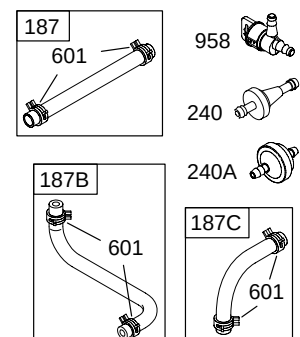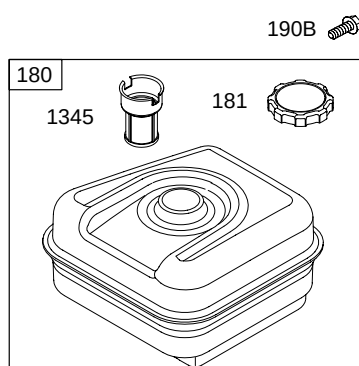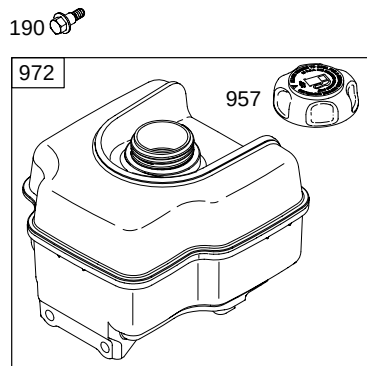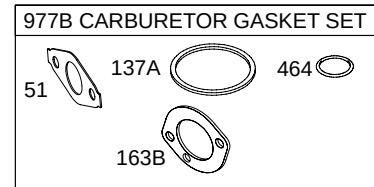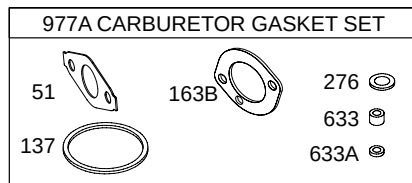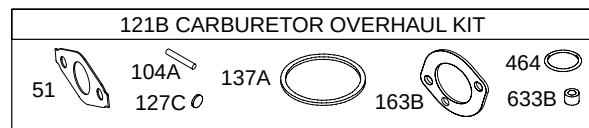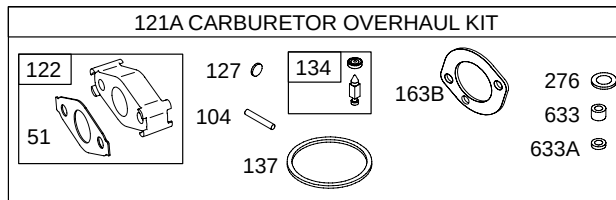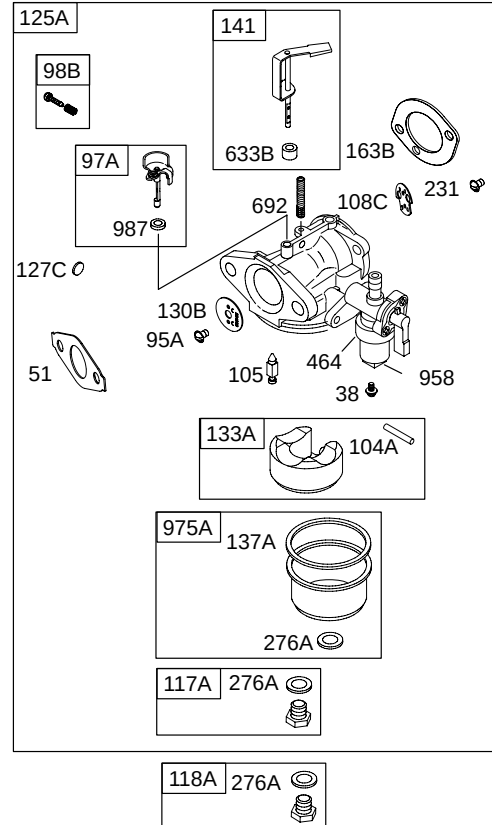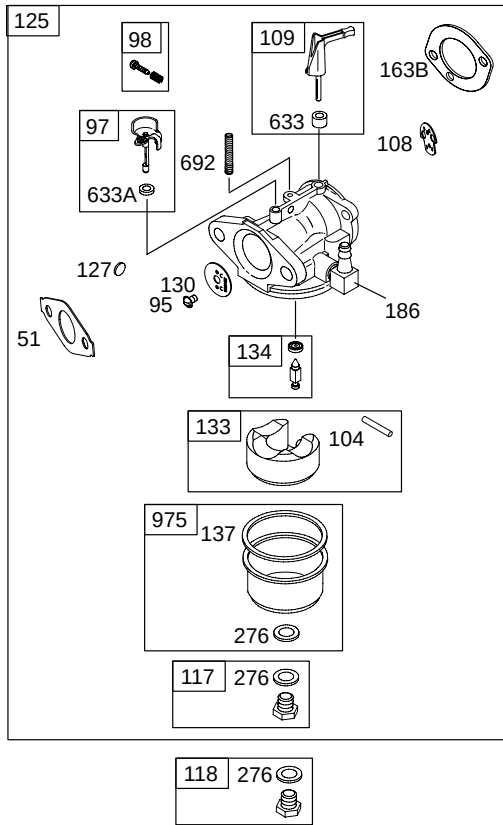


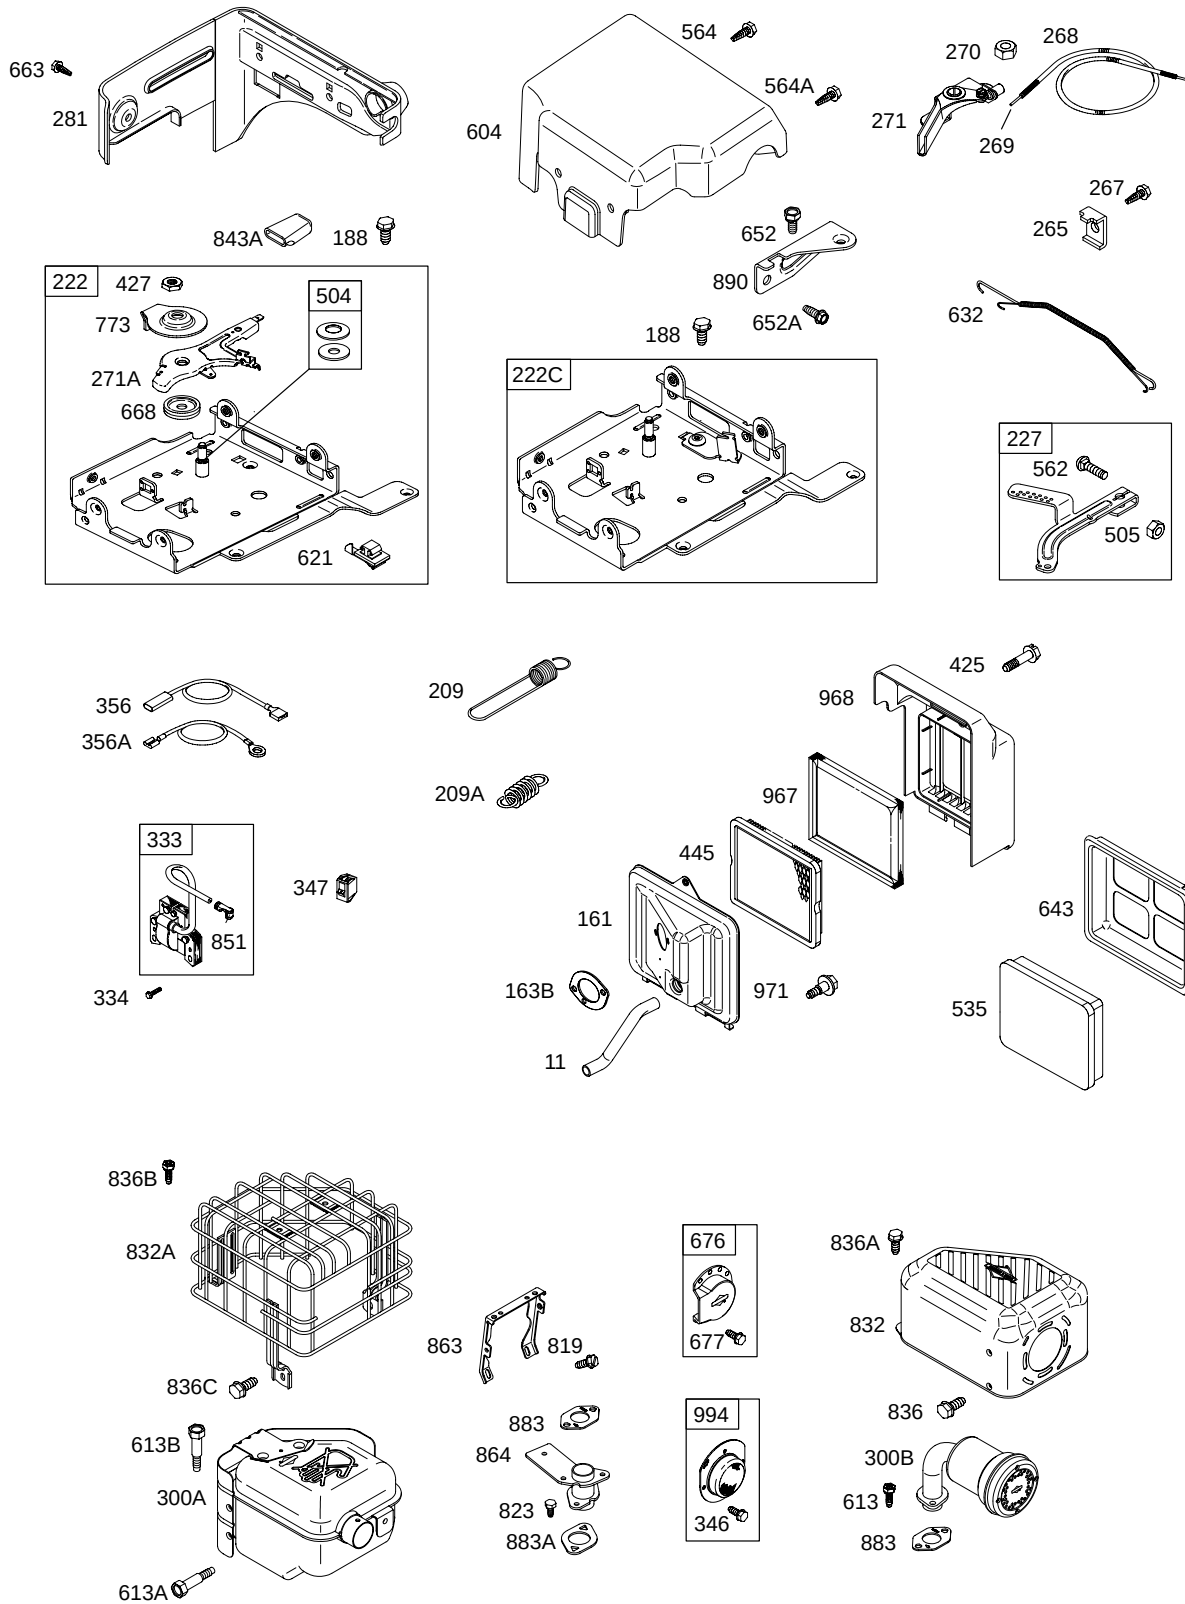

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5732-5 Assemblies include all parts shown in frames. 08/17/2005

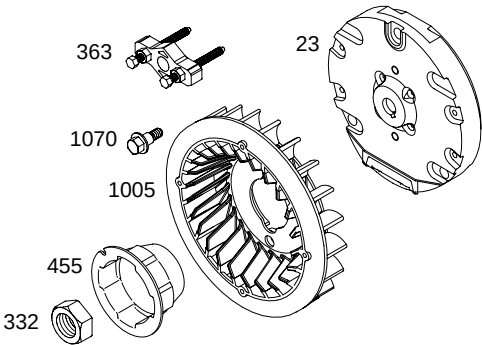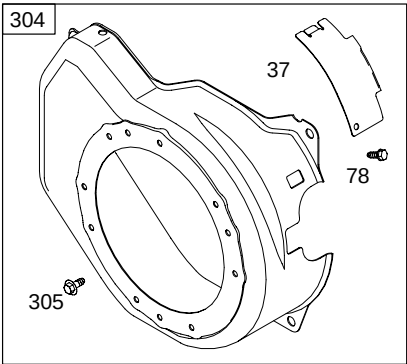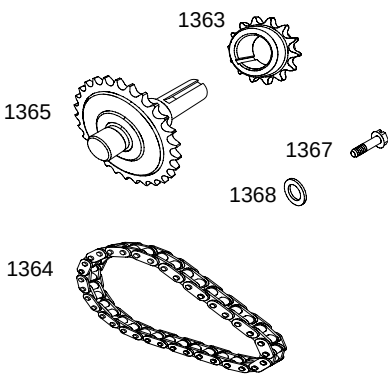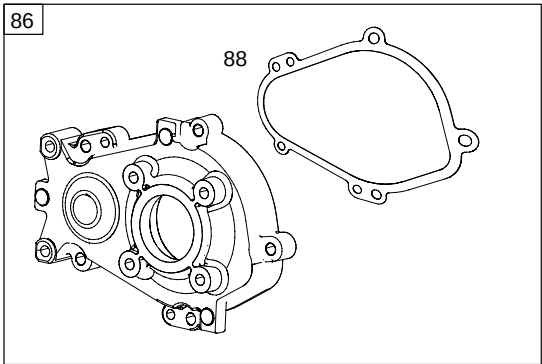

1036 EMISSION LABEL

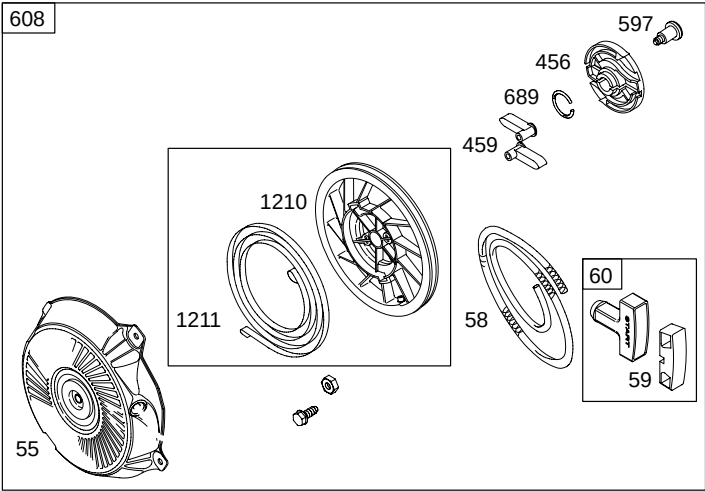

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699490	Cylinder Assembly	17	692517	Bearing–Ball	26	791969	Ring Set
2	399269	Kit–Bushing/Seal (Magneto Side)	17A	690824	Bearing–Ball			(Standard)
3	★299819	Seal–Oil (Magneto Side)	18	790337	Cover–Crankcase Used on Type No(s). 0152, 0153, 0161, 0170, 0172, 0173, 0174, 0175, 0176.			(Used After Code Date 05030800). ----- Note -----
5	699486	Head–Cylinder						499631 Ring Set
7	★Ø698210	Gasket–Cylinder Head	18A	699672	Cover–Crankcase Used on Type No(s). 0033, 0125, 0126, 0150, 0158, 0163, 0164, 0171, 0178.			(Standard)
11	812208	Tube–Breather (Flat Panel Air Cleaner)						(Used Before Code Date 05030900).
		----- Note -----	18D	790330	Cover–Crankcase Used on Type No(s). 0156, 0157, 0165.			791324 Ring Set
		692600 Tube–Breather Used on Type No(s). 0125, 0126, 0158, 0171.						(.020" Oversize)
12	★699485	Gasket–Crankcase	20	★692550	Seal–Oil (PTO Side)			(Used After Code Date 05030800).
13	699482	Screw (Cylinder Head)	21	281658	Cap–Oil Fill			692786 Ring Set
15	691686	Plug–Oil Drain (Square Head)	22	699478	Screw (Crankcase Cover/ Sump)	27	691866	(.020" Oversize)
15A	691682	Plug–Oil Drain (Flush)	23	699488	Flywheel	28	499423	(Used Before Code Date 05030900).
16	699835	Crankshaft	24	222698	Key–Flywheel	29	690124	Lock–Piston Pin
		----- Note -----	25	792004	Piston Assembly (Standard) (Used After Code Date 05030800).	30	692562	Pin–Piston
		699443 Crankshaft Used on Type No(s). 0150, 0158, 0161, 0163, 0164, 0171, 0174.				32	691664	Rod–Connecting
		790329 Crankshaft Used on Type No(s). 0156, 0157, 0165.						Dipper–Connecting Rod
		698879 Crankshaft Used on Type No(s). 0172, 0173, 0176.				32	691664	Screw (Connecting Rod)
		696259 Crankshaft Used on Type No(s). 0175.				32A	695759	Screw (Connecting Rod)
		699441 Crankshaft Used on Type No(s). 0125, 0126.				33	499642	Valve–Exhaust
		699442 Crankshaft Used on Type No(s). 0033, 0178.				34	499641	Valve–Intake
						35	691304	Spring–Valve (Intake)
						36	691304	Spring–Valve (Exhaust)
						37	699661	Guard–Flywheel
						38	698557	Screw (Shut Off Valve)
						40	692194	Retainer–Valve
						45	690977	Tappet–Valve
						46	693404	Camshaft
						46A	696813	Camshaft
						51★◆Ø692555		Gasket–Intake (2 Required)

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5732–7

Assemblies include all parts shown in frames.

08/17/2005

124300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691422	Housing–Rewind Starter	121A	696998	Kit–Carburetor Overhaul	187	791766	Line–Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note -----
58	693389	Rope–Starter (Cut to Required Length)	121B	698567	Kit–Carburetor Overhaul			
59	490653	Grip–Insert	122	★693749	Spacer–Carburetor			
60	490652	Grip–Starter Rope (2 Piece)	125	698474	Carburetor Used on Type No(s). 0125, 0126, 0171.			691050 Line–Fuel (Cut to Required Length) (Used Before Code Date 05070100).
65	699228	Screw (Rewind Starter)	125A	698558	Carburetor ----- Note -----	187B	791874	Line–Fuel (Molded) (Used After Code Date 05063000). ----- Note -----
78	699205	Screw (Flywheel Guard)			698535 Carburetor Used on Type No(s). 0152, 0156, 0175, 0176.			693401 Line–Fuel (Molded) (Used Before Code Date 05070100).
86	790332	Cover–Gear	127	●691739	Plug–Welch	187C	791866	Line–Fuel (Molded) (Used After Code Date 05063000). ----- Note -----
88	790333	Gasket–Gear Reduction Cover	127C	●690727	Plug–Welch			694486 Line–Fuel (Molded) (Used Before Code Date 05070100).
95	691636	Screw (Throttle Valve)	130	691181	Valve–Throttle	188	699479	Screw (Control Bracket)
95A	698544	Screw (Throttle Valve)	130B	698543	Valve–Throttle	190	699220	Screw (Fuel Tank)
97	690024	Shaft–Throttle	133	398187	Float–Carburetor	190B	699839	Screw (Fuel Tank)
97A	698542	Shaft–Throttle	133A	698539	Float–Carburetor	192	694543	Adjuster–Rocker Arm
98	398185	Kit–Idle Speed (Carburetor)	134	●398188	Kit–Needle/Seat	209	692571	Spring–Governor ----- Note -----
98B	698551	Kit–Idle Speed (Carburetor)	137	●693981	Gasket–Float Bowl			693206 Spring–Governor Used on Type No(s). 0033, 0125, 0126, 0178.
104	●691242	Pin–Float Hinge	137A	●698538	Gasket–Float Bowl	209A	691278	Spring–Governor
104A	●698536	Pin–Float Hinge	141	698545	Kit–Choke Shaft			
105	698537	Valve–Float Needle	146	690979	Key–Timing ----- Note -----			
108	692567	Valve–Choke			790943 Key–Timing Used on Type No(s). 0156, 0157, 0165.			
108C	698546	Valve–Choke	155	★698214	Plate–Cylinder Head			
109	690023	Shaft–Choke	161	699207	Base–Air Cleaner (Metal) (Flat Panel Air Cleaner)			
117	690048	Jet–Main (Standard)			163B★●696024 Gasket–Air Cleaner (Flat Panel Air Cleaner)			
117A	698666	Jet–Main (Standard) ----- Note -----	180	699838	Tank–Fuel (Metal)			
		698670 Jet–Main (Standard) Used on Type No(s). 0152, 0156, 0175, 0176.	181	699840	Cap–Fuel Tank (Metal)			
118	498976	Jet–Main (High Altitude)	186	692317	Connector–Hose			
118A	698552	Jet–Main (High Altitude)						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5732–8

Assemblies include all parts shown in frames.

08/17/2005

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
219	693578	Gear–Governor	286	698611	Module–Oil Sensor	445	491588	Filter–Air Cleaner
220	691724	Washer (Governor Gear)	287	699629	Screw (Dipstick Tube)			Cartridge (Flat Panel)
222	699589	Bracket–Control	300A	699231	Muffler	455	692591	Cup–Flywheel
222C	699493	Bracket–Control	300B	693593	Muffler	456	692299	Plate–Pawl Friction
		----- Note -----	304	699598	Housing–Blower	459	281505	Pawl–Ratchet
		699590 Bracket–Control	305	699480	Screw (Blower Housing)	464	◆698550	Seal–O Ring (Fuel Shut Off Valve)
		Used on Type No(s). 0033, 0172.	306	693610	Shield–Cylinder	504	694254	Washer Set–Friction
227	692573	Lever–Governor Control	307	699483	Screw (Cylinder Shield)	505	691251	Nut (Governor Control Lever)
231	690718	Screw (Choke Valve)	332	699359	Nut (Flywheel)	522	697689	Plug–Dipstick/Fill
238	691300	Valve–Cap	333	695711	Armature–Magneto	523	693618	Dipstick
240	694485	Filter–Fuel	334	699477	Screw (Magneto Armature)	524	281370	Seal–Dipstick Tube
240A	298090	Filter–Fuel	337	491055	Plug–Spark	535	696263	Filter–Air Cleaner Foam
		----- Note -----			----- Note -----	552	692346	Bushing–Governor Crank
		394358 Filter–Fuel			691043 Plug–Spark	562	691119	Bolt (Governor Control Lever)
		Used on Type No(s). 0125, 0126, 0171.			Used on Type No(s). 0125, 0126, 0171, 0172, 0173, 0175, 0176.	564	699492	Screw (Control Cover)
265	691024	Clamp–Casing	346	690661	Screw (Spark Arrester)	564A	699206	Screw (Control Cover)
267	699492	Screw (Casing Clamp)	347	698338	Switch–Rocker	597	691696	Screw (Pawl Friction Plate)
268	691025	Casing–Control Wire (72" Long) (Cut to Required Length)			----- Note -----	601	95162	Clamp–Hose
269	691026	Wire–Control (78" Long) (Cut to Required Length)			697854 Switch–Rocker	604	697326	Cover–Control
					Used on Type No(s). 0125, 0126, 0158, 0170, 0172, 0173, 0174, 0175.	608	693394	Starter–Rewind
270	691027	Nut (Control Wire Casing)	356	692602	Wire–Stop	613	699209	Screw (Muffler)
271	691028	Lever–Control	356A	695630	Wire–Stop	613A	699230	Screw (Muffler)
271A	694256	Lever–Control	358	699638	Gasket Set–Engine	613B	697812	Screw (Muffler)
276	◆271716	Washer–Sealing	363	19069	Puller–Flywheel	615	692576	Retainer–Governor Shaft
276A	◆698540	Washer–Sealing	364	695693	Terminal–Oil Plug	616	692547	Crank–Governor
281	790261	Panel–Control	365	699484	Screw (Carburetor)	619	699230	Screw (Cylinder Head Plate)
		----- Note -----	383	19374	Wrench–Spark Plug	621	692310	Switch–Stop
		699639 Panel–Control	415	693463	Plug	632	693408	Spring/Link– Mechanical Governor
		Used on Type No(s). 0033, 0125, 0126, 0150, 0158, 0163, 0164, 0171.	425	699208	Screw (Air Cleaner Cover)			
			427	694255	Nut (Control Bracket)			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊘ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5732–9

Assemblies include all parts shown in frames.

08/17/2005

124300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
633	●693867	Seal–Choke/Throttle Shaft	842	691031	Seal–O Ring (Dipstick Tube)	994	399541	Arrester–Spark
633A	●691321	Seal–Choke/Throttle Shaft	843A	695588	Sleeve–Lever	1005	692592	Fan–Flywheel
633B	●690998	Seal–Choke/Throttle Shaft	847	693617	Dipstick/Tube Assembly	1019	694852	Kit–Label
635	692927	Boot–Spark Plug	851	493880	Terminal–Spark Plug	1022	★Ø691890	Gasket–Rocker Cover
643	696264	Retainer–Air Filter	863	699229	Bracket–Muffler	1023	499924	Cover–Rocker Arm
652	699755	Screw (Support Bracket)	864	699232	Adapter–Muffler	1026	693517	Rod–Push
652A	699230	Screw (Support Bracket)	868	★Ø692044	Seal–Valve	1029	691230	Arm–Rocker
663	699206	Screw (Control Panel)	883	★691893	Gasket–Exhaust	1034	691343	Guide–Push Rod
668	694257	Spacer	883A	★692237	Gasket–Exhaust	1036	790634	Label–Emission (Used After Code Date 04063000).
676	393757	Deflector–Muffler	890	790203	Bracket–Control	----- Note -----		
677	690661	Screw (Muffler Deflector)	914	699481	Screw (Rocker Cover) (Bottom)	699946 Label–Emission (Used Before Code Date 04070100 and After Code Date 03093000).		
689	691855	Spring–Friction	914A	692557	Screw (Rocker Cover) (Top)	699946 Label–Emissions (Used Before Code Date 03102900).		
692	690572	Spring–Detent	914B	697551	Screw (Rocker Cover) (Center)	1052	790141	Sensor–Oil
718	690959	Pin–Locating	957	694261	Cap–Fuel Tank (Plastic)	1058	276355	Owner's Manual
741	695087	Gear–Timing	958	698549	Valve–Fuel Shut Off (Plastic)	1070	699201	Screw (Flywheel Fan)
742	692564	Retainer–E Ring	967	493537	Filter–Pre Cleaner (Flat Panel)	1095	698215	Gasket Set–Valve
746	692566	Gear–Idle	968	692584	Cover–Air Cleaner (Flat Panel)	1210	498144	Pulley/Spring Assembly (Pulley)
773	694258	Retainer	----- Note -----			1211	498144	Pulley/Spring Assembly (Spring)
799	699202	Screw (Oil Sensor)	698811 Cover–Air Cleaner (Flat Panel) Used on Type No(s). 0033, 0178.			1305	699691	Screw (Oil Sensor Module)
819	699233	Screw (Muffler Bracket)	971	690370	Screw (Air Cleaner Base To Carburetor)	1330	272147	Repair Manual
823	699209	Screw (Muffler Adapter)	972	694260	Tank–Fuel (Plastic)	1345	699887	Filter–Filler Neck
830	694544	Stud–Rocker Arm	975	493640	Bowl–Float	1363	790334	Sprocket–Gear Reduction
832	693583	Guard–Muffler	975A	698541	Bowl–Float	1364	790335	Chain–Gear Reduction
----- Note -----			977A	697001	Gasket Set–Carburetor	1365	790336	Shaft–Output Gear Reduction
699841 Guard–Muffler Used on Type No(s). 0152, 0153, 0156, 0157, 0161, 0164, 0165, 0170, 0172, 0174, 0175, 0176.			977B	698568	Gasket Set–Carburetor	1367	690936	Screw (Gear Reduction Sprocket)
832A	697818	Guard–Muffler	987	698556	Seal–Throttle Shaft	1368	790338	Washer (Gear Reduction Sprocket)
836	699203	Screw (Muffler Guard)	993	Ø694088	Gasket–Cylinder Head Plate			
836A	699632	Screw (Muffler Guard)						
836B	699209	Screw (Muffler Guard)						
836C	699234	Screw (Muffler Guard)						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5732–10

Assemblies include all parts shown in frames.

08/17/2005